WI-XML Side 1 av 3

Transporter


Current Flow Diagram

No. 41 / 1 Edition 04.2001

Additional water heater D3W

From August 1998

For alternatives to relay and fuse positions as well as multi-pin connector wiring - see "Fitting locations" section.

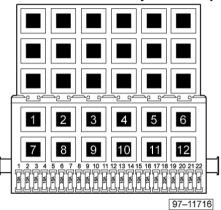

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7.5 A - brown

5 A - beige

3 A - purple

WI-XML Side 2 av 3

Transporter Current Flow Diagram S14 4,0 ro TV₂ 1,0 1,5 sw/ro sw/bl J₁₆₂ K SB₄ **ਊ**T10/1 **ਊ**T10/2 0,5 bl/ws 0,75 br ₫T_{6/3} (L62) ↑T8/6 ↑T8/1 ↑T8/2 ↑T8/4 MT_{8/5} MT_{8/3} F38 0,5 ro ws = white sw = black ₫ **T**6/6 ₫T_{6/2} ₫T_{6/4} ro = redbr = brown an = areenbl = bluegr = grey = purple ge = yellow or = orange L51) rs = pink □ T_{6/5} 30 12 13 97-29550

Heater control unit D3W, ambient temperature switch, combustion air blower, fuel pump

No. 41/2

F4 - Reversing light switch

F38 - Ambient temperature switch

G23 - Fuel pump

J162 - Heater control unit D3W

SB4 - Fuse -4- in fuse box/relay plate, below the relay plate

T6 - 6-pin connector, in engine compartment, left

T8 - 8-pin connector, near heater unit

T10 - 10-pin connector

TV2 - Terminal 30 junction box, red, both have 6-pin

TV5 - Terminal 15a junction box, green, 4-pin and 8-pin

V6 - Combustion air blower

- Earth point -1-, next to relay plate

- Positive (+) connection -1-, in auxiliary heater wiring harness

- Positive (+) connection (30a), in additional heater wiring

harness

Wire for diagnostic signal

WI-XML Side 3 av 3

Transporter Current Flow Diagram A2/1 U2/12 0,35 bl 1,0 Ы В Т1 J₂₈₅ **1 T**8/7 C/D+ J₁₆₂ (K) r T10/5 r T10/6 G₁₈ G64 G189 ws = white sw = black ro = redbr = browngn = greenbl = blue gr = grey li = purple ge = yellow or = orange rs = pink 97-23384

Heater control unit D3W, temperature sensor, glow plug, flame monitor, overheating sensor

No. 41/3

C - Alternator

G18 - Temperature sensor, in heater

G64 - Flame monitor, in heater

G189 - Overheating sensor, in heater J162 - Heater control unit D3W

J285 - Control unit with display in dash panel insert

Q9 - Glow plug for heater

T1 - Single connector, behind relay plate
T1b - Single connector, behind relay plate
T1g - Single connector, behind relay plate

T8 - 8-pin connector, near heater

T10 - 10-pin connector

T32 - 32-pin connector, on dash panel insert